


# Keystone Jack Installing Instruction


KJ15 series

1

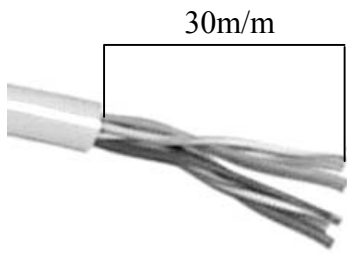

Strip approximately 30mm of the cable jacket, and separate to 4 pair each.

2

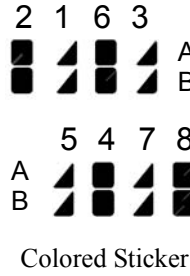


**T568A**

Pin 1 White/Green  
Pin 2 Green  
Pin 3 White/Orange  
Pin 4 Blue  
Pin 5 White/Blue  
Pin 6 Orange  
Pin 7 White/Brown  
Pin 8 Brown

**T568B**


Pin 1 White/Orange  
Pin 2 Orange  
Pin 3 White/Green  
Pin 4 Blue  
Pin 5 White/Blue  
Pin 6 Green  
Pin 7 White/Brown  
Pin 8 Brown

3

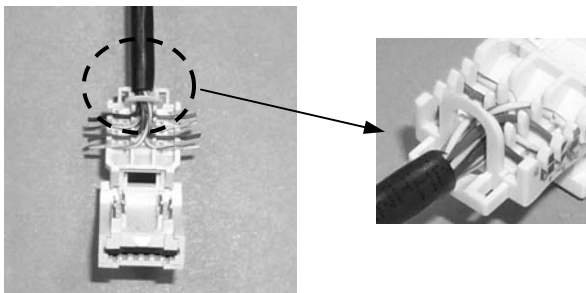



Follow the direction on the plastic lid color-coding to position T568A or T568B wiring, separate a little space on proper position and insert the wire pair by pair into each slot.

4

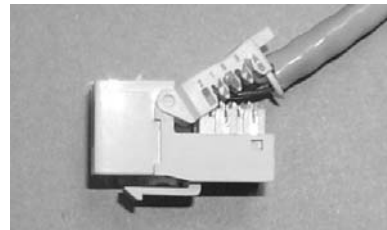

Close the plastic lid by your thumb to crimp and connect the wires.

5

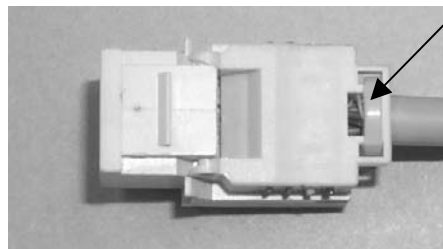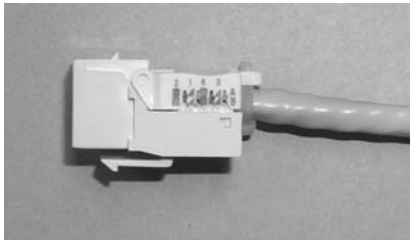

**Complete the installation.**